


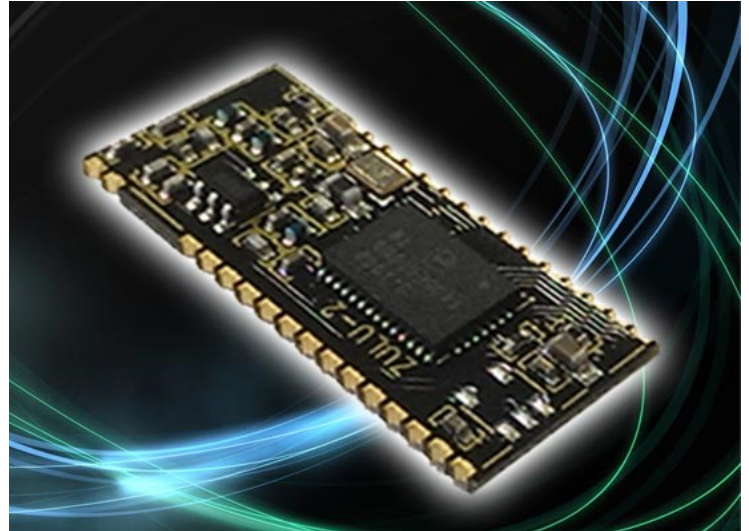

## 868/915 Radio MODEM Module

### Features

- Intelligent RF modem module
- Serial data interface with handshake
- Host data rates up to 57,600 baud
- RF Data Rates to 115Kbps
- Range up to 2Km
- Minimal external components
- Direct LED drive shows data flow
- Secure data protocol
- Ultra low power 2.4 - 3.6V operation
- CE compliant for licence free use
- User selectable 868 / 915MHz operation
- 100mW transmit power (+20dBm)
- Receiver sensitivity -121dBm



### Applications

- Remote networking
- USB/RS232 cable replacement
- Remote data log
- Meter reading

### Description


The ZULU-2 modem module is a highly integrated RF modem and intelligent controller with simple interface. The ZULU-2 modem can achieve a wireless serial data link at up to 38K4bps over a 2Km range. Range may be further extended with suitable antenna. Now includes on board XTAL for simpler integration.

The user interface is standard RS232, operating at low voltage. All RF operation is automatically controlled (with error checking etc) so the ZULU-2 can be treated as a simple communications device. Possible applications include one-to-one and multi-node wireless links in applications including car and building security, EPOS, inventory tracking, remote industrial process monitoring and computer networking. Because of their small size and low power requirements these modules are ideal for use in portable, battery-powered applications such as hand-held terminals.

### Ordering Information

Part No	Description
ZULU2-M89-SO	Radio modem module SMT package 868/915MHz
ZULUEVAL-M	Evaluation Board for ZULU2
ZULU-DONGLE	USB Dongle version (see separate Data)

## Connections

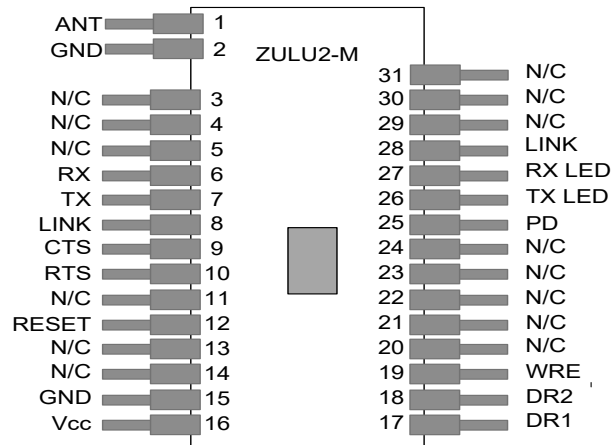

## Pin Description

Pin No	Name	Direction	Description
1	ANT	In	Antenna input / Output 50ohm impedance
2, 15	GND	In	Connect to ground
3-5, 11, 13-14, 20-24	N/C	N/A	Unused leave disconnected.
6	RX	In	(Low Level) RS232 data in
7	TX	Out	(Low Level) RS232 data out
8	LINK	In	Connect to LINK on pin 28
9	CTS	Out	(Low level) RS232 CTS
10	RTS	In	(Low level) RS232 RTS
12	RESET	In	Device reset input (Tie high via 10K resistor)
16	Vcc	In	+2.2 - +3.6v
17-18	DR1-DR2	In	Host data rate selection.
19	WRE	In	Do not connect - unused.
25	PD	In	Power down mode. Take low to enter 'sleep' mode
26	TX LED	Out	RF TX LED indicator
27	RX LED	Out	RF RX LED indicator
28	LINK	Out	Connect to LINK on Pin 8
29-30*	XTAL1-2*	In*	These pins are provided as legacy to ensure compatibility with older ZULU modules
31	NC		Leave unconnected

### Notes on compatibility with earlier ZULU modules.

ZULU-2 is hardware compatible with all ZULU previous versions, however it cannot communicate with ZULU R1.1 firmware or earlier. The ZULU-2 is 100% backward compatible with ZULU R1.4 and later when Unit ID (R7) is set to the correct value.

If using the ZULU-2 in an existing product designed for ZULU then do so without fitting the external crystal - no other hardware changes are necessary.

Check the configuration set-up for new features and any changes to defaults.

## Operational description

### Serial Data Format

Baud Rate: Defined using DR1 and DR2 Pins  
Data Bits: 8  
Parity: None  
Stop Bits: 1  
Flow Control: Hardware CTS / RTS

### RX, TX

These pins are for data input/output. Data is transmitted and received at the low voltage level (dependent on the Vcc being used). Compatible with LCTTL / LVCMOS.

### CTS, RTS

Clear To Send (CTS) and Request To Send (RTS) are as RS232 standard data flow control used. However they operate at the ZULU-2 modem modules low level Vcc (3V). If no handshaking is required, RTS may be pulled low. However beware of data overrun errors when transmitting streams of data longer than the data buffer size (55bytes).

### RESET

Connection to GND resets the module. The ZULU-2 modem module starts when this input is taken from GND to Vcc. Normal operation: connect to Vcc through a 10Kohm resistor.

### DR1 - DR2

These inputs define the host interface baud rate. They are read only when the RESET pin goes high.

It is good practice to operate the host interface at half the speed of the RF data rate.

**Note:** Baud rate can also be configured in using the in built configuration mode. See page 6.

DR1	DR2	Host Baud Rate
Vcc / Unconnected	Vcc / Unconnected	4,800
Vcc / Unconnected	GND	9,600
GND	Vcc / Unconnected	19,200
GND	GND	38,400

### PD

Enables 'Deep Sleep' mode when connected to ground. To return to normal operation connect to Vcc and toggle RST or cycle power. No RF packets will be received by the module when in Deep sleep mode.

### WRE

No longer used - leave unconnected.

### Tx/Rx LED

Direct LED drive which operates whenever there is RF activity.

### XTAL1, XTAL2

The ZULU-2 modem module no longer requires a 30MHz drive crystal to be connected between XTAL1-2. See notes on page 2 for compatibility with older versions.

**Crystal spec:** 30MHz , +/-10ppm, ~20pF. Such as FEC 184-2247.

### TX LED, RX LED

LED drive pins drive via ~320ohm resistor dependent on Vcc.

## Operation Overview

The ZULU-2 modem module provides a simple interface to the host controller. It handles all RF data communications automatically and without any requirement from the user (RF packetising, preamble, encoding, CRC check etc).

With this powerful high-speed radio link, the following networks can be realised:

## Networking

**One-to-One;** For point to point data communication.

**One-to-Many/Broadcast;** A network consisting a master and many slaves (all receivers have the same address).

**Many-to-One;** Where all transmitters with different addresses send to a single receiver address.

**Note:** Because each ZULU-2 modem module can be given a unique address, multiple ZULU-2 networks can co-exist in the same area. This type of operation requires clear timing between transmissions or corruption of packets can occur.

### Addressing Networks

Each ZULU-2 modem module has a generic pre-configured default address (7F7F7F). This can be modified during configuration. When data received via RF it is examined and the address header embedded within it is compared with its address. Only data received with matching address will be processed and output to the host, all other data will be discarded.

When sending data, the ZULU-2 modem module has a default destination address set to 7F7F7F, this can be user configured.

By setting the two addresses appropriately the above network types can be easily achieved.

## Operating Modes

**Configuration Mode:** In configuration mode the ZULU-2 modem module can receive commands to set internal registers to define its eventual operation. In this mode the ZULU-2 modem module is 'Offline' and cannot send or receive RF data.

**Normal Operation:** The ZULU-2 modem module is 'Online' automatically transmitting and receiving data from its serial interface across its RF network.

**Acknowledge Secure Mode :** In this mode each time a ZULU-2 modem module transmits an RF packet, an additional 'packet ID' is added. This ID is a rolling verification counter to receiving ZULU-2 modem modules.

Any correctly addressed receiving ZULU-2 modem module replies with an RF acknowledgment also containing the 'packet ID'. If the transmitting ZULU-2 fails to receive the expected acknowledgement it will transmit the packet again (up to 10 times).

## Handshaking

The ZULU2 modem module required the handshaking (RTS/CTS) to communicate with its host interface.

**Note:** If you do not intend to use handshaking, it is possible to tie the RTS pin to GND and use the modules without. In this configuration the ZULU-2 modem module will send all data in its buffer after a 10ms timeout. Up to 55bytes can be buffered before data is lost. A minimum of 15ms should be allowed before new data is sent to the module after each packet. This is not a recommended method of operation.

## Configuration Mode (offline)

Commands can be set using a standard terminal program or by sending the relevant ASCII characters.

Each command must be followed by the Carriage Return <CR> or 'Enter' except "+++"

Note: All commands are entered in upper case

Command	Description	Response from ZULU-2
+++	Enter Configuration Mode  Note: This command must be sent as a string with no characters in front or behind. This is to ensure that the +++ is not mistakenly received in mid-data.	ZULU-2 responds with status info
?	Retrieve the current register values	ZULU-2 responds with all register values
F	Pre-configured factory defaults; R1=7F7F7F R2=7F7F7F R3 = Ch2 (869.450MHz) R4 = 7 (+20dBm) R5 = 1 (19K2)	'OK'
H	Help	Brief description of commands available
P	<b>Ping Mode</b> This sends a ping request.  On receiving, the recipient ZULU-2 Modem will respond with its address and the level of RSSI (Received Signal Strength)  The Ping command is continuously repeated every 1 second until any command or character is entered.  Please note: R1 and R2 on both devices must be set to the same address for RSSI signal strength to show.	The originating ZULU-2 modem module will respond with the recipient ZULU-2 modems' address. eg. Received from 7F7F7F (D5)  Where 7F7F7F = the recipient address D5= RSSI  <b>RSSI</b> Is a hex value corresponding to the received signal strength Min = 20hex Max =E0hex
S	Save Configuration	'SAVED'
Q	Exit configuration mode and return to	No response
V	Request ZULU version	Reports Hardware and Firmware Version

## Register Values (Configuration Mode)

### Set a register:

To set a register, type 'R#=x' where # is the register number (1-6) and x is the value to set.

**For example**, to set the RF channel to 3 type : R3=3<CR>

(Where <CR> is carriage return or enter on the keyboard)

Register	Value Range	Description	Example
R1	0000 - FFFFFFFF (24 bit address) <b>Default: 7F7F7F</b>	Sets the recipient ZULU-2 modem module address	R1=0001 (Data sent to ZULU-2 Modem module with address 0001)
R2	0000 - FFFFFFFF (24 bit address) <b>Default: 7F7F7F</b>	Set ZULU-2 modem module address	R2=F001 (Data sent is from ZULU-2 modem module with address)
R3	CH0 to CH4	Sets the RF channel selection page 7.	R3=2 (Transmit on channel 2)
R4	0 = +1dBm 1 = +2dBm 2 = +5dBm 3 = +8dBm 4 = +11dBm 5 = +14dBm 6 = +17dBm 7 = +20dBm	Set the RF transmit power output*	R4=7 (sets transmit power to max)*
R5	0 = 9,600 1 = 19,200 2 = 28,800 <b>3 = 56,000</b> 4 = 115,200	Set the RF baud rate*	R5=3 (sets the RF data rate to 56Kbps)
R6	<b>0 = Off</b> 1 = On	(Acknowledge) Secure mode enable	R6=1 (Secure Mode on)
R7	0-FF (hex) <b>Default = D4</b>	Unique system identifier	R7=A3 Identifier set to A3.
R8	0 = 4800 <b>1 = 9600</b> 2 = 14400 3 = 19200 4 = 28800 5 = 38400 6 = 56000 7 = 57600	Host baud rate - software override.  FF - uses DR1 and DR1 pins.	R8=3 Baud rate set to 19K2
R9	0 or 1	Data whitening enable	R9=1 Enable
RO	<b>00</b> or 01	OTA Enable Over the air configuration enable	RO=1 Enable
RB	<b>8</b> or 9	8 sets Carrier to 868MHz Band 9 sets Carrier to 915MHz	RB=9 (set to 915MHZ carrier)

## Using Configuration Mode

### Baud rates:

It is possible to set both host and RF baud rate via configuration mode. The RF Baud rate should always be twice the host baud rate for best operation.

### Secure mode

See "Operating Modes" Page 4.

### Unique system identifier

Adds a unique identifier at the RF stage. This allows unmatched data packets to be ignored without the need to decode - saving processor time and making a more efficient system when many nodes are present in one location. Systems with the same identifier will operate together. Use for multiple networks in one location. **Do not use addresses: FF, AA or 55**

### OTA - Over the air configuration

It is possible to have a remote node enter configuration mode and change that node's register settings by sending it the unique code <918273> (including the <>).

After entering OTA mode - all subsequent communications must be sent as macros and will need to include the Line Feed <LF> (do not send "<LF>" this command must be sent as ASCII code 10 which can vary depending on the software used)

Examples:

Send:	Response:	Send:	Response:	Send:	Response:
<918273>	7F7F7F 7F7F7F 02 00 03 00 D4 01 01 01 01	?<LF>	7F7F7F 7F7F7F 02 03 00 D4 01 01 01 01	R4=05<LF> > R5=02<LF> > Q<LF> S<LF>	OK OK NONE NONE

### IMPORTANT Notes:

In OTA mode all values are entered in hex and sent as ASCII. Registers must be set in multiples of two characters - ie to set register 6 you must send 06 - as above examples show.

1. Changes made in OTA mode will be lost if not saved.
2. OTA mode cannot be used in conjunction with acknowledge secure mode.

## RF Channel Selection


On the 868MHz band The EU standard sets maximum power transmission limits dependent on frequency, bandwidth and application. Please check the relevant standards are being met when implementing your Application. A rough guidance applicable to the ZULU-2 channel numbers is given below:

Channel Number	Frequency Centre (MHz)	USA Power Allowance mW / dBm	Frequency Centre (MHz)	EU Power Allowance mW / dBm	Notes
0	915.000	100 / 20	868.400	25 / 14	Applicable standard - EN300-220
1	915.500	100 / 20	868.900	25 / 14	
2	916.000	100 / 20	<b>869.450</b>	<b>100 / 20</b>	
3	916.500	100 / 20	869.600	100 / 20	
4	917.000	100 / 20	869.800	25 / 14	

# ZULU2 Modem



## Mechanical Dimensions

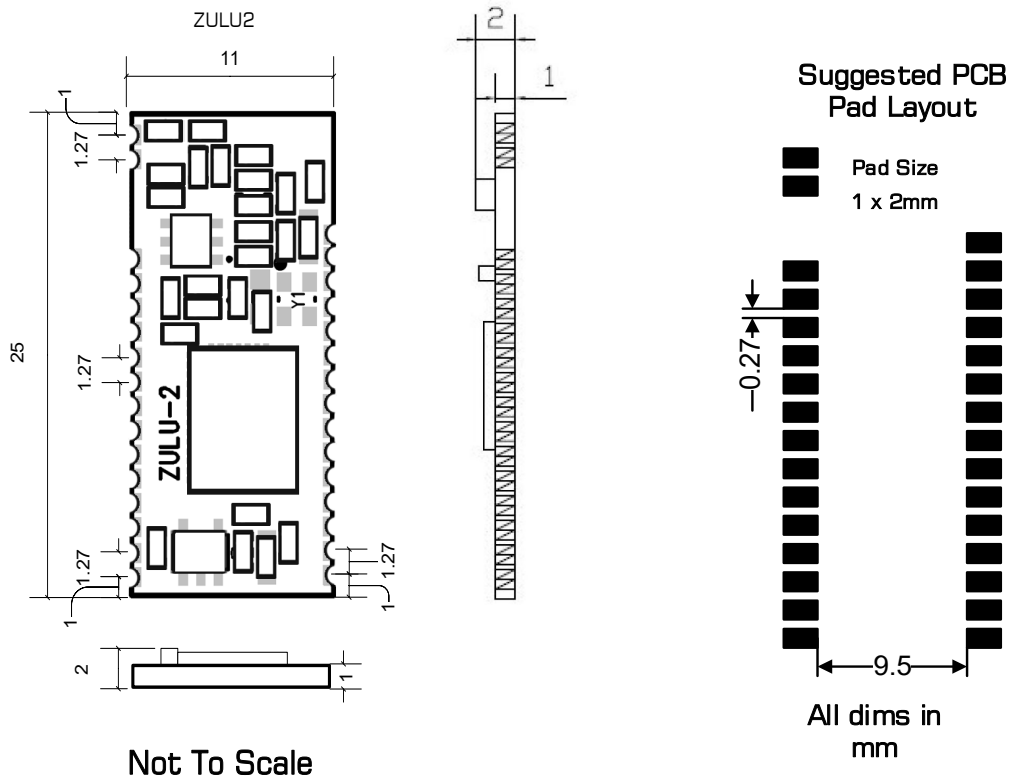

## Range

The antenna choice and position directly controls the system range. Keep it clear of other metal in the system. The best position by far, is protruding vertically from the top of the product. This is often not desirable for practical reasons and thus a compromise may be needed. Note that the space around the antenna is as important as the antenna itself. All radio systems are dependant on a radio signal being received through airspace.

The range quoted is the optimal in direct line of sight without obstacles and in good atmospheric conditions.

Range is affected by many things, for example local environmental conditions, atmospheric conditions, interference from other radio transmitters. For evaluating the local environment please see our RF Meter (DS006).

In very worse case applications the range quoted may be reduced below 30% of the optimal range stated.

## Recommended Miniature Antenna 868MHz

The BEAD Antenna provides a Miniature PCB mounting solution where performance is required from a small space.

Available as straight or 90 degree mount this antenna is a general purpose omni-directional. Please see Datasheet ANT-BEAD-868.





## Technical Specifications

### Absolute Maximums:

**Temperature Range:** Storage -50 to +125°C.

**Weight:** SMT version 7grams, DIP Part 13grams

Parameter	Min	Max	Units
Voltage on any Input	$V_{cc} > 2.2$	3.8	V
	$V_{cc} < 2.2$	$V_{cc} + 3.6$	V
Max Input power (thro Antenna)		+10	dBm

Parameter	Min	Typical	Max	Units
Supply voltage	2.4	3	3.6	V
Operating Temperature	-40		+85	°C
ZULU-2 Tx supply current:				
When transmitting (At max power)		85		mA
When sleeping		1		uA
ZULU-2 Rx Supply Current:				
When Receiving		18.5		mA
When sleeping		1		uA


## RF Characteristics

Parameter	Min	Typical	Max	Units
Operating frequency—see freq channel setting	868 915.0		870 917.0	MHz
Operating temperature	-40		+85	°C
Band width per channel				
868		60		KHz
915		500		
Deviation		45		KHz
ZULU-2 Tx MAX output power			+20	dBm
ZULU-2 Tx—Rx FSK Raw RF data rate	9.6		115,200	Kbps
ZULU-2 Rx sensitivity	-102 @115K		-109	dBm

## ZULU2 module Version Identification

Firmware Version

Test  
Green Pass

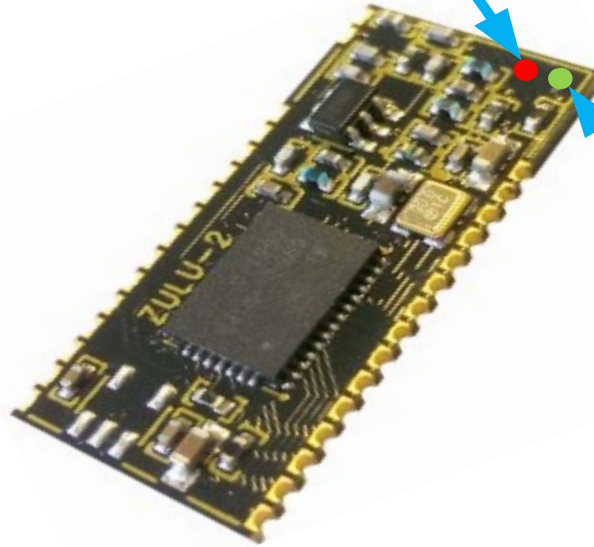

Firmware versions Uses std Colour Coding	
Colour Dot	Rev
Brown	1
Red	2
Orange	3
Yellow	4
Green	5
Blue	6
Violet	7
Grey	8
White	9


ZULU2 REVISION CHANGE HISTORY			
ECN	New Revision	Ident Dot	Change / Fix
277	1.6	Red	<p><b>Reason for Change:</b> ZULU Locks up on saving in OTA Configuration mode. ZULU Locks up when entering local Configuration mode and exiting in succession.</p> <p><b>Details of Change</b> Update to FW to clear stack pointer to prevent stack overflow same reason for both issues.</p> <p><b>Impact / risk analysis</b> The parts will function but a chance they may fail in rare occasions. OTA function will not work correctly.</p>
312	3	Orange	<p>Change of Firmware only Addition of User selectable frequency Band 868 / 915MHz</p>

## ZULU2 Modem Evaluation Board

The ZULU-2 EVAL Board provides a ready made platform which can be used to demonstrate the capabilities of ZULU-2 modem modules providing ready made RS232 and USB modem solutions.

### Features

- Direct Connection to RS232 / USB
- 9-12Vdc Power in Screw Terminal
- LED Indication Transmit / Receiver
- User Configuration Links

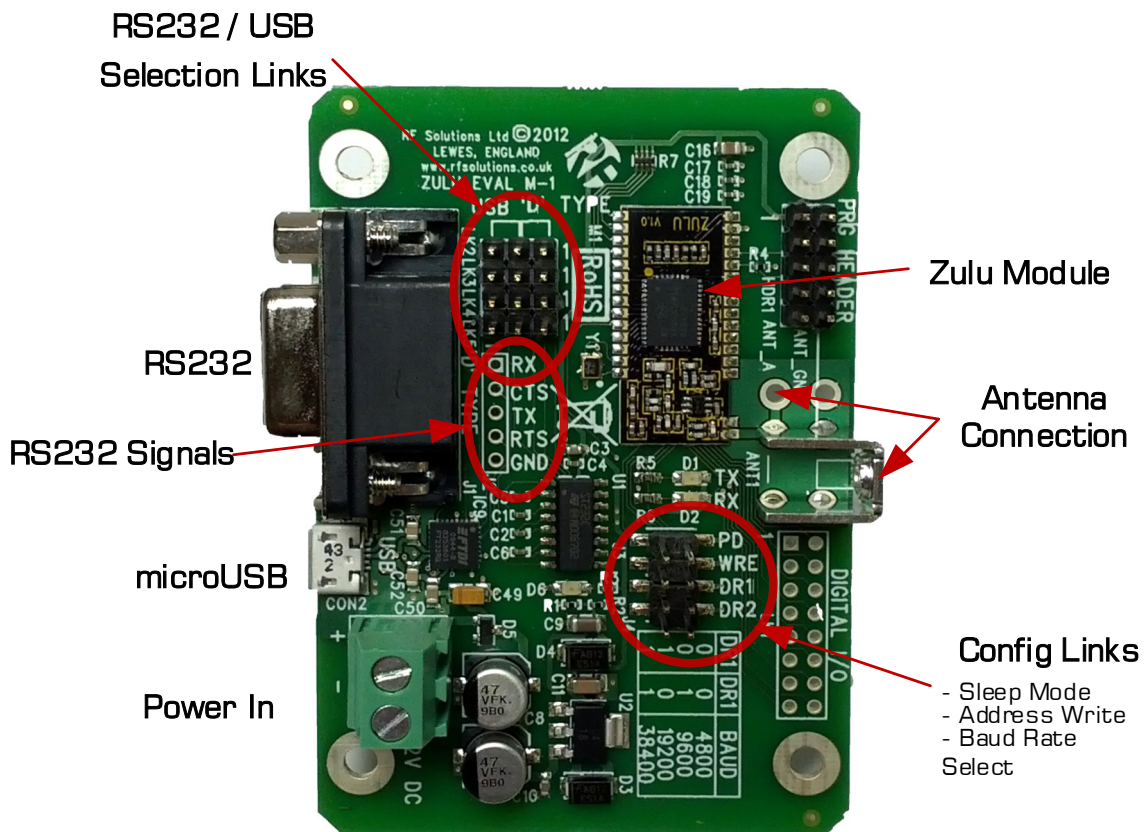

### Ordering Information

Part No	Description
ZULU-EVAL-M	ZULU-2 Modem Eval Board 868MHz
PSU-12V100MAUK	Plugtop Power Supply 12V 100mA

## EVAL Board Configuration

**Power Requirements: 9-15Vdc**

Weight: 27grams, Dimensions:

### USB / D Links (LK2,3,4,5)

For USB connect all Links from Centre to 'USB' Side.

For RS232 connect all Links from Centre to 'RS232' Side.

Link Ref	Name	When Fitted	When Open										
PD	Power Down	Modem is Placed in Sleep Mode	Normal Operation										
DR1 DR2	Sets Host Baud	<table><tr><td>DR1</td><td>DR2</td></tr><tr><td>Open</td><td>Open</td></tr><tr><td>Open</td><td>Fitted</td></tr><tr><td>Fitted</td><td>Open</td></tr><tr><td>Fitted</td><td>Fitted</td></tr></table>	DR1	DR2	Open	Open	Open	Fitted	Fitted	Open	Fitted	Fitted	Baud Rate: 4800 9600 19200 38400
DR1	DR2												
Open	Open												
Open	Fitted												
Fitted	Open												
Fitted	Fitted												

### Antenna Connector

The connector is a 4mm Screw Thread (Part NO: SCRTM4RA).

### Power Connection

Power is required for RS232 comms, USB connection provides power automatically—note that USB port cannot supply adequate power for full +20dBm transmission! Additional power is needed for maximum range!

### Host Terminal Software

Connection to Host is via the micro-USB Cable or RS232 Cable.

Any Terminal emulation program can interface the Eval board, one we have found to be easy to use and powerful is 'Terminal'


This can be downloaded from: <https://sites.google.com/site/terminalbpp/>

<https://sites.google.com/site/terminalbpp/>

### Notes for Optimising Range

1. Use max RF Transmit power (set Register R4 = 7)
2. Use the slowest RF comms Rate (set Register R5 = 0)
3. Power the Eval boards from 12V (don't rely on the USB power)
4. Consider upgrading the antennas to models with gain.
5. Enable data whitening.

## ZULU-2 Modem Evaluation Board Schematic

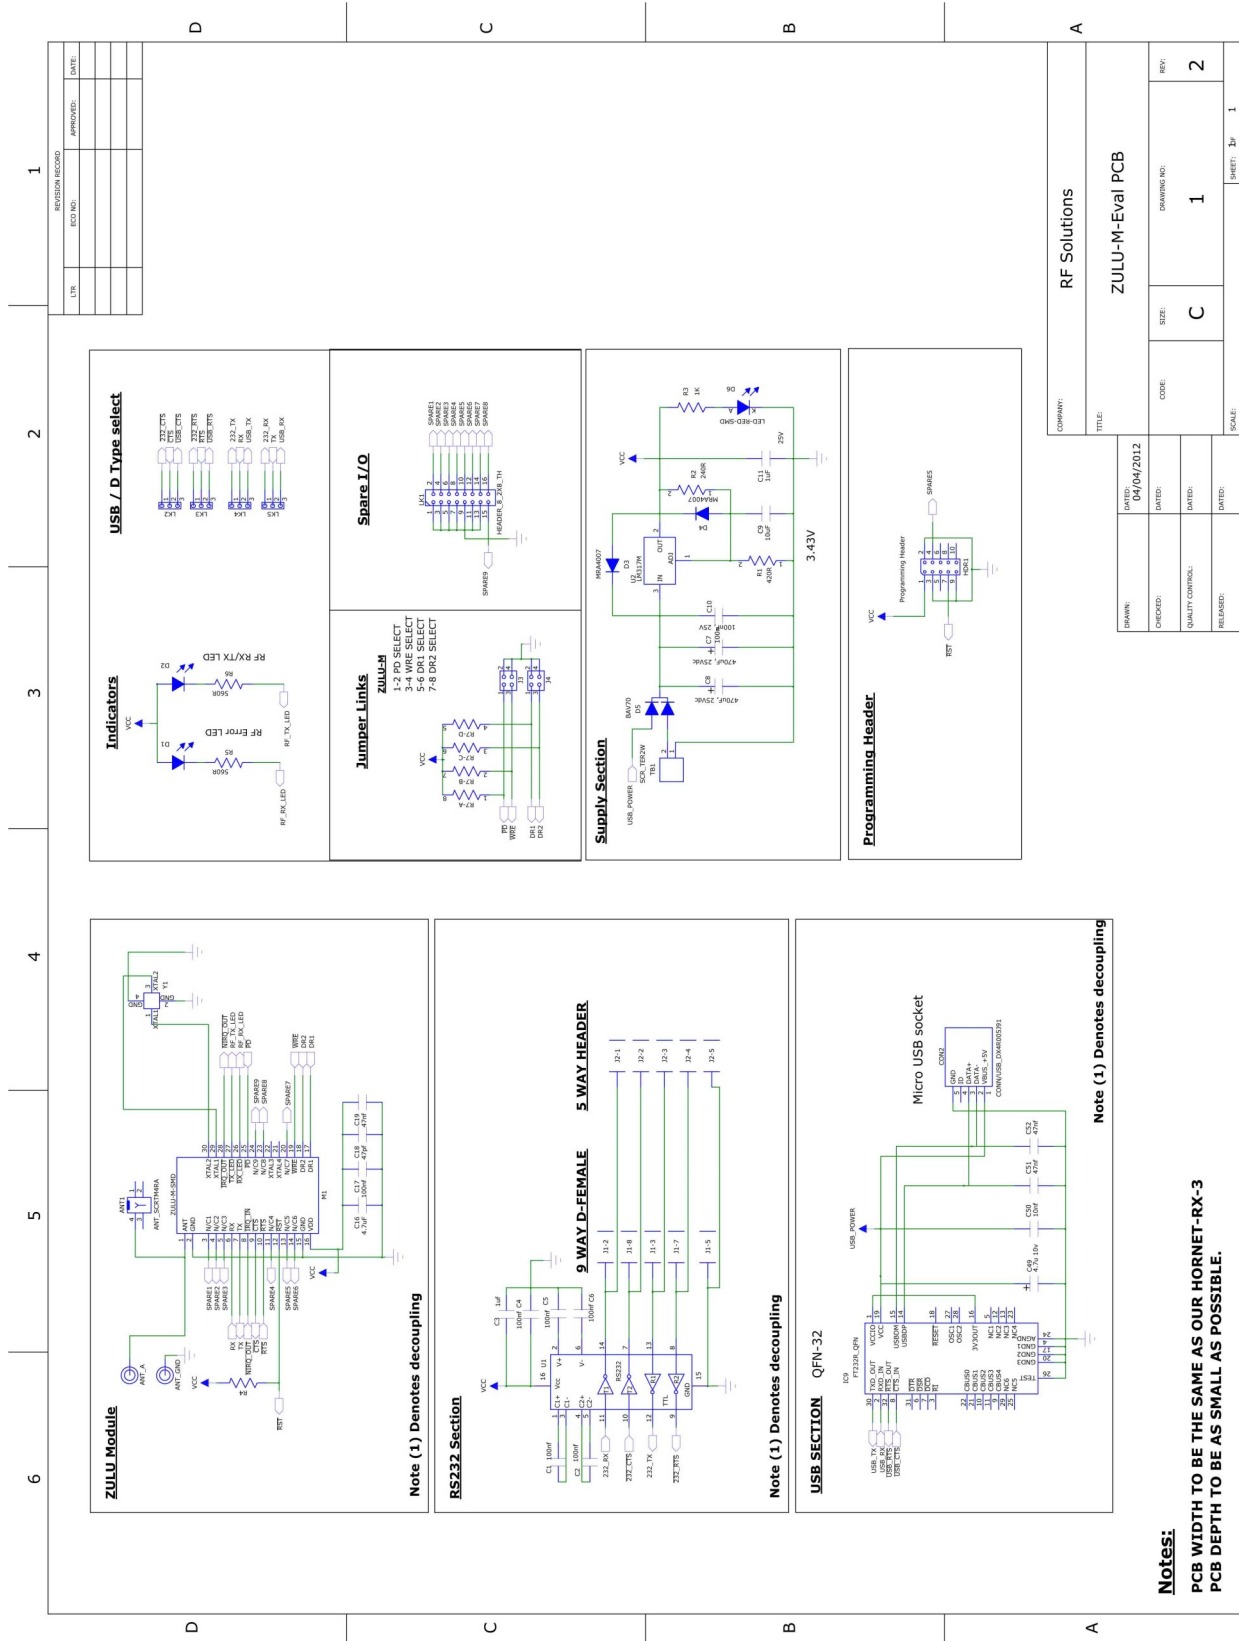

COMPANY: RF Solutions	
TITLE: ZULU-M-Eval PCB	
DATE: 04/04/2012	DRAWING NO: 1
CHECKED:	SIZE: C
QUALITY CONTROL:	REP: 2
RELEASED:	SCALE: 1:1

**Notes:**  
 PCB WIDTH TO BE THE SAME AS OUR HORNET-RX-3  
 PCB DEPTH TO BE AS SMALL AS POSSIBLE.

REVISION RECORD	
REV.	DATE

## Simplified Declaration of Conformity (RED)

**BG** - С настоящото RF Solutions Limited декларира, че този тип радиосъоръжение е дефинирано в този документ в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**CS** -Tímto RF Solutions Limited prohlašuje, že typ rádiového zařízení definované v tomto dokumentu je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**DA** - Hermed erklærer RF Solutions Limited, at radioudstyrstypen defineret i dette dokument er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**DE** - Hiermit erklärt RF Solutions Limited, dass der Funkanlagentyp in diesem Dokument definiert der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**EL** - Με την παρούσα ο/η RF Solutions Limited, δηλώνει ότι ο ραδιοεξοπλισμός ορίζεται σε αυτό το έγγραφο πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**EN** - Hereby, RF Solutions Limited declares that the radio equipment type defined within this document is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**ES** - Por la presente, RF Solutions Limited declara que el tipo de equipo radioeléctrico definido dentro de este documento es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**ET** -Käesolevaga deklareerib RF Solutions Limited, et käesolev raadioseadme tüüp määratletud selles dokumendis vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**FI** -RF Solutions Limited vakuuttaa, että radiolaitetyyppi määriteltä selles dokumendis on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**FR** - Le soussigné, RF Solutions Limited, déclare que l'équipement radioélectrique du type défini dans ce document est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**HR** - RF Solutions Limited ovime izjavljuje da je radijska oprema tipa definirani u ovom dokumentu u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o skladnosti dostupan je na sljedećoj internetskoj adresi: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**HU** - RF Solutions Limited igazolja, hogy a dokumentumban meghatározottak szerint típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**IT** - Il fabbricante, RF Solutions Limited, dichiara che il tipo di apparecchiatura radio definito all'interno di questo documento è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**LT** - Aš, RF Solutions Limited, patvirtinu, kad radijo įrenginių tipas apibrėžta šiame dokumente atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**LV** - Ar šo RF Solutions Limited deklarē, ka radioiekārta kas definēts šajā dokumentā atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**MT** - B'dan, RF Solutions Limited, niddikjara li dan it-tip ta' tagħmir tar-radju definit f'dan id-dokument huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**NL** - Hierbij verklaar ik, RF Solutions Limited, dat het type radioapparatuur gedefinieerd in dit document conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**PL** - RF Solutions Limited niniejszym oświadczam, że typ urządzenia radiowego zdefiniowane w tym dokumencie jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**PT** - O(a) abaixo assinado(a) RF Solutions Limited declara que o presente tipo de equipamento de rádio definido neste documento está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**RO** - Prin prezenta, RF Solutions Limited declară că tipul de echipamente radio definit în acest document este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**SK** - RF Solutions Limited týmto vyhlasuje, že rádiové zariadenie typu definované v tomto dokumente je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**SL** - RF Solutions Limited potrjuje, da je tip radijske opreme opredeljeno v tem dokumentu skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

**SV** - Härmed försäkrar RF Solutions Limited att denna typ av radioutrustning definieras i detta dokument överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: [www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

### RF Solutions Ltd. Recycling Notice

Meets the following EC Directives:

#### DO NOT

Discard with normal waste, please recycle.

#### ROHS Directive 2011/65/EU and amendment 2015/863/EU

Specifies certain limits for hazardous substances.

#### WEEE Directive 2012/19/EU

Waste electrical & electronic equipment. This product must be disposed of through a licensed WEEE collection

point. RF Solutions Ltd., fulfills its WEEE obligations by membership of an approved compliance scheme.

Environment Agency producer registration number: **WEE/JB0104WV**.



### Disclaimer:

Whilst the information in this document is believed to be correct at the time of issue, RF Solutions Ltd does not accept any liability whatsoever for its accuracy, adequacy or completeness. No express or implied warranty or representation is given relating to the information contained in this document. RF Solutions Ltd reserves the right to make changes and improvements to the product(s) described herein without notice.

Buyers and other users should determine for themselves the suitability of any such information or products for their own particular requirements or specification(s). RF Solutions Ltd shall not be liable for any loss or damage caused as a result of user's own determination of how to deploy or use RF Solutions Ltd's products. Use of RF Solutions Ltd products or components in life support and/or safety applications is not authorised except with express written approval. No licences are created, implicitly or otherwise, under any of RF Solutions Ltd's intellectual property rights. Liability for loss or damage resulting or caused by reliance on the information contained herein or from the use of the product (including liability resulting from negligence or where RF Solutions Ltd was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict RF Solutions Ltd's liability for death or personal injury resulting from its negligence.