

## Velocity IoT Quick Start Guide

### Step 1

Create your Velocity IoT account, go to [www.velocityiot.net](http://www.velocityiot.net)

### Step 2

Activate your SIMs. Enter your 18 digit ICCID, select your ONERATE pool group and select your plan.



### Step 3 (Device setup)

Make sure to set the following items for connectivity on your Device or module:

- Use the APN: **floive.net**
- Enable **Roaming**
- Set the module to **data centric**

Since these are multi-carrier SIMs it is best not to limit the Cellular Module Bands

### Step 4

Insert the SIM card in your device and get started!

### Support

For support contact [support@velocityiot.io](mailto:support@velocityiot.io) or post a ticket on our support desk

Additional SIMs may be ordered through Velocity in bulk via purchase order or with our distribution partner Digi-Key : Velocity on [ww.digikey.com](http://ww.digikey.com)