

Water Resistant Stopwatch | 810012

Instruction Manual

Stopwatch Operation

Press A unit at Stopwatch display. If necessary, Press B-Stop & C-Reset to 0

Event	Split	1-2 Finish
B-Start	B-Start	B-Start
B-Stop	C-Split	C-Stop #1
(Repeat B, B time-in/time-out)	C-Release	B-Stop #2
C-Reset	(Repeat C, C each split)	(See #1 time)
	B-Stop	C-Release
	C-Reset	(See #2 time)
		C-Reset

Time, Calendar & Alarm Display

Press A until at time display,
Hold B - Display Month, Date & Day
Hold C - Display Alarm
Hold B & C - Alarm On/Off

To Set Time & Calendar

Press A 3 times to enter Set Mode
Press C to select Seconds, Minutes,
Hours (A/P=12HOUR, H=24HOUR),
Date, Month, Day
Press B to change any of the above
(Second only refers to 00)
(Hold B to change digits rapidly)
Press A to return to Time display

To Set Alarm

Press A 2 times to enter set mode
Press C to select Minutes & Hours
Press B to change Minutes & Hours
Press A to return to the display

Disable Hourly Chime

In time mode, press C and hold then press A, you will see dashes across the top, this means the hourly chime is on. Press A again and release, you will notice the dashes are gone, this means the chime is off.

