

## System Check

### Laptop Requirements

 
- A Windows® Laptop (Windows 7 or Windows 8)
- MacBook running Windows (Parallels, VM Fusion, etc)
- Note: Administrator rights are needed for software and driver installation.

## 1. Install Keil MDK-ARM v5

Download and install the Keil MDK-ARM professional tool suite:


<http://www2.keil.com/stmicroelectronics-stm32/mdk>

In the Pack Installer window, click the “Install” button to download the family packs for the STM32F0 and STM32L0 series

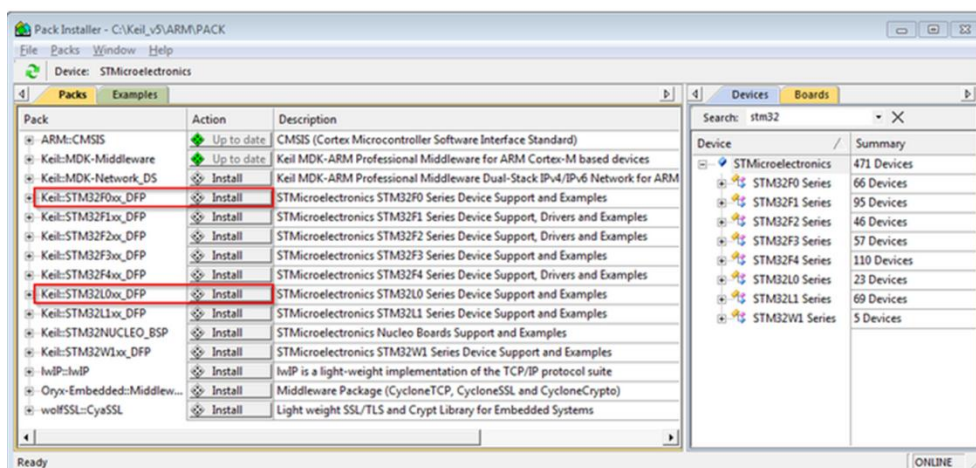

**Activation steps:** From your desktop, right click on Keil uVision5 and select “Run as Administrator”; in File > License Management, Single-User License tab, click “Get LIC via Internet...” and fill out the web form in your browser.

 Product Serial Number (PSN): **U1E21-CM9GY-L3G4L**

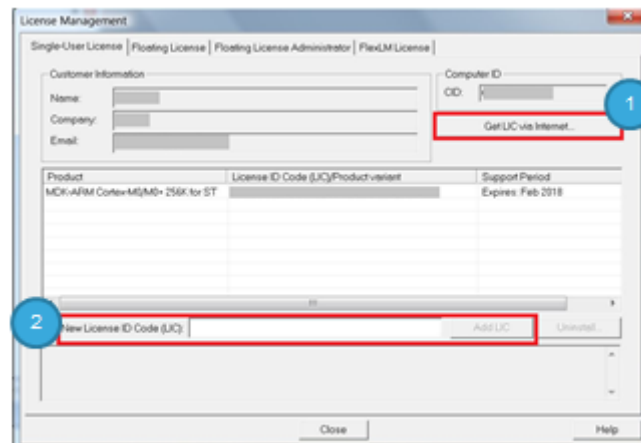

Once you receive the license by email, come back to the License screen and enter it in “New License ID Code (LIC)” box and click “Add LIC” button to finish.

## 2. Install STM32CubeMX

Download STM32CubeMX installer from [www.st.com/stm32cube](http://www.st.com/stm32cube)

Part Number	Version	Marketing Status	Order From ST
STM32CubeMX	4.9.0	Active	<a href="#">Download</a>

 
- Locate the file in your download folder (or your default download location if different) and unzip the file SetupSTM32CubeMX-4.8.0.exe to your location of choice. Run the STM32CubeMX installer (SetupSTM32CubeMX-4.9.0.exe)
- Java Run Time Environment 1.7 (version 1.7\_45 or newer) is required. STM32Cube Installer will prompt user if Java download is required
- To complete the STM32CubeMX install you will be prompted to restart your computer.

After successful installation you will see a shortcut to the STM32CubeMX on your Desktop


## 3. Proxy Server configuration

Launch the STM32CubeMx


- Click on “Help”
- Open on “Updater settings”

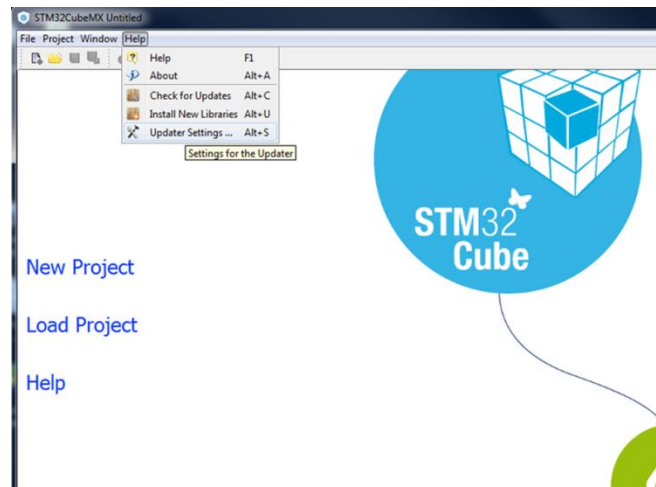

 - Select the “Connection Parameters” tab

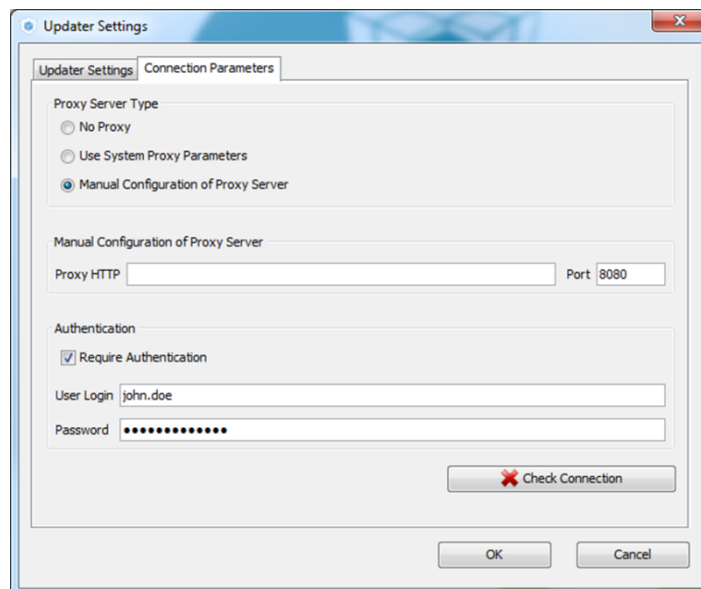


 - Configure your internet access
  - Proxy Server Type
    - No Proxy
    - Use System Proxy Parameters
    - Manual Configuration
- Manual Configuration of proxy server
  - Contact your IT administrator for proxy type, HTTP address, and Port.
- Confirm Internet Connection
  - Click on “Check Connection”
  - Green CHECK Mark




## 4. Install STM32Cube Library Package

 - Open “Install New Libraries”  
Menu->Help -> Install New Libraries

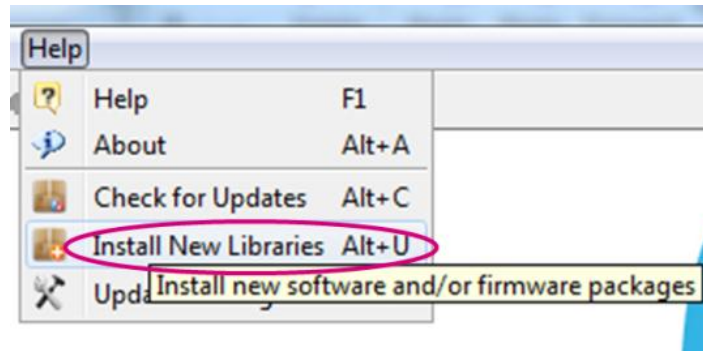

- “Check” the STM32F0 and L0 packages

 Release notes are displayed at the bottom.

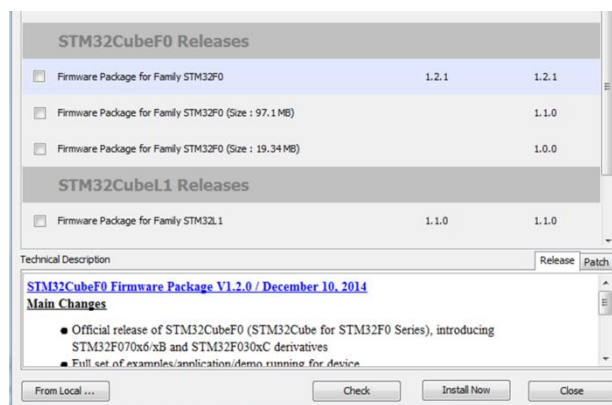

- Click on “Install Now”

## 5. Install ST-Link Utility

The ST-Link Utility allows typical flash program / erase / upload / download functions via the ST-LINK/V2 debugger, onboard the Discovery Board & Nucleo Boards. It also installs the Windows device drivers necessary for the ST-LINK/V2 debugger.

- Download ST-Link Utility application from, <http://www.st.com/web/en/catalog/tools/PF258168>.

Part Number	Version	Marketing Status	Order From ST
STSW-LINK004	3.7.0	Active	<a href="#">Download</a>

- Run STM32 ST-LINK Utility\_v3.7.0.exe installer

