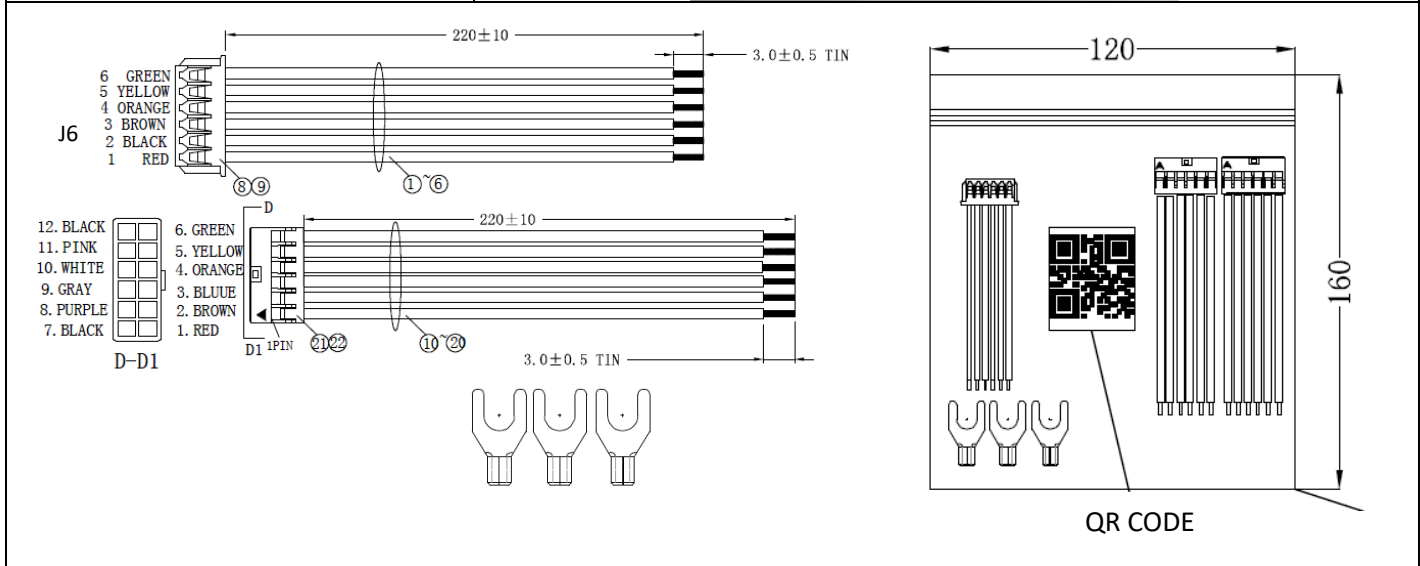

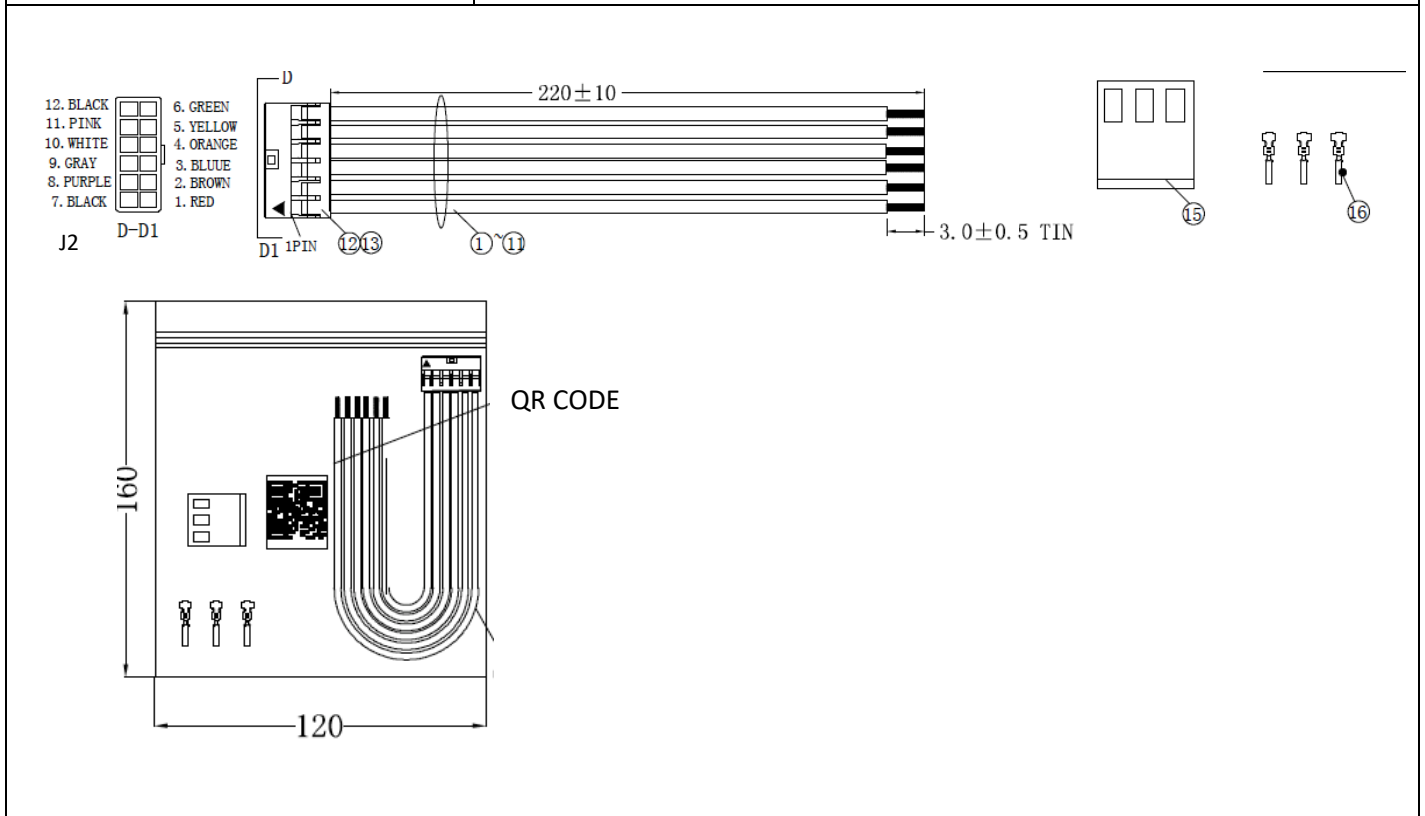



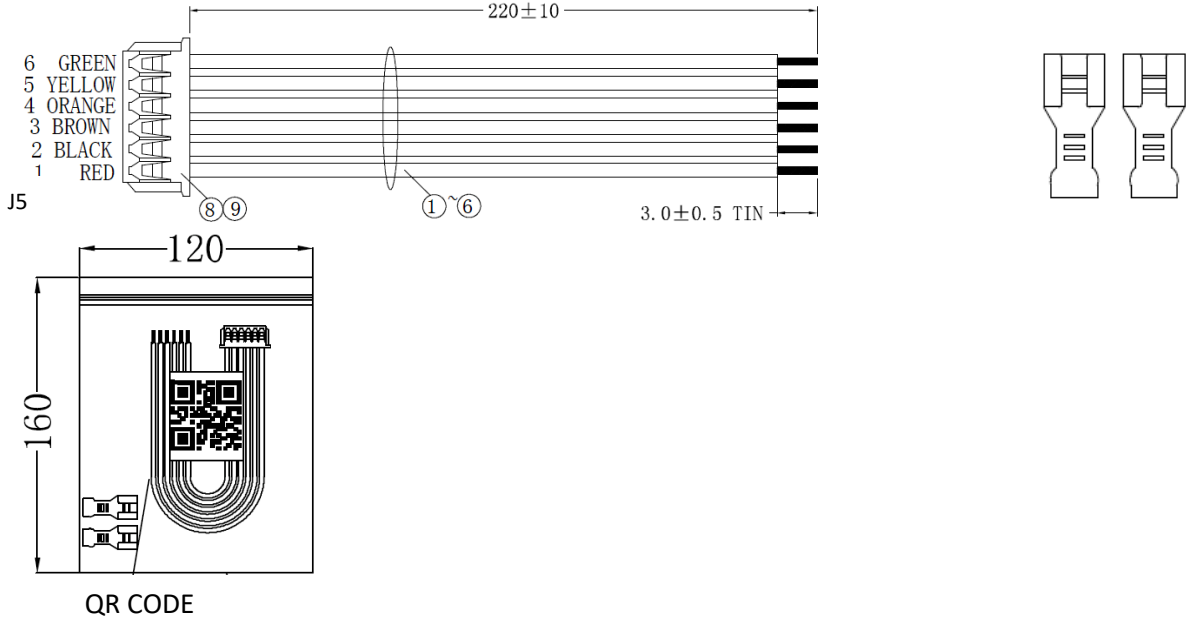
NEVO+1200 Input Cable Set (CAB-N12)


CAB-N12 Contents	
3 x Input Power Connector (J1) Crimp Terminals	
2 x Global Signal (J2A & J2B) Cables (220mm)	
1 x Primary Standby (J6) Cable (220mm)	

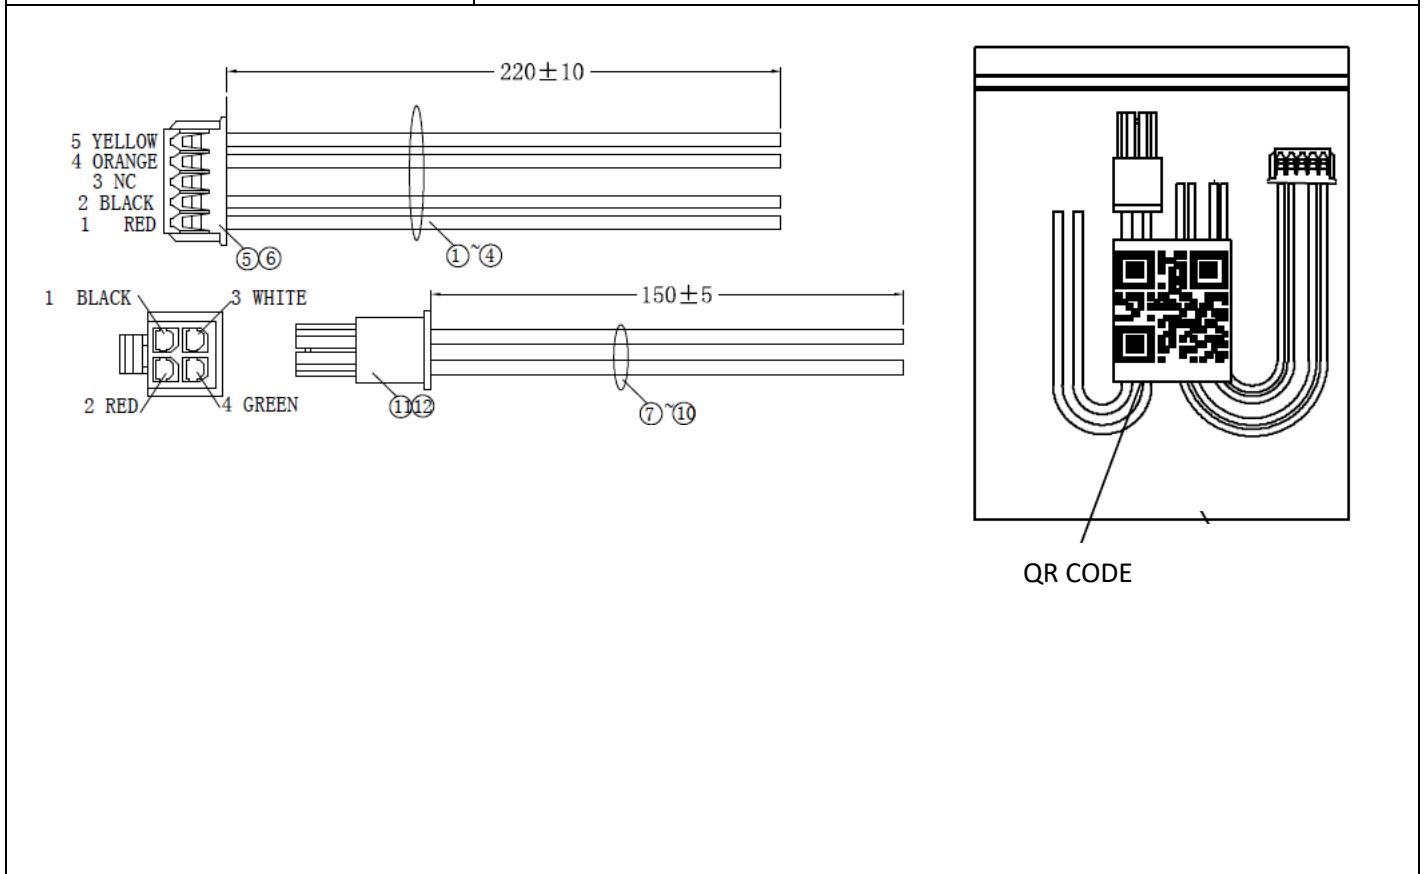


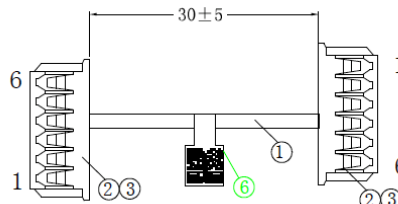
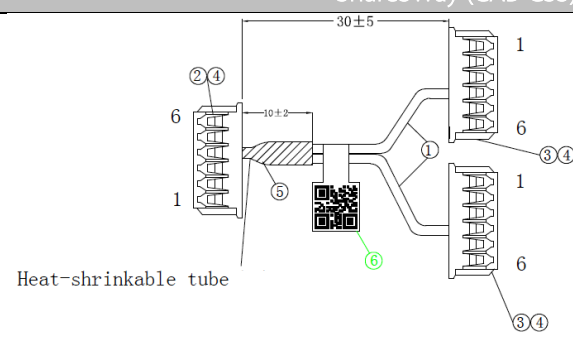
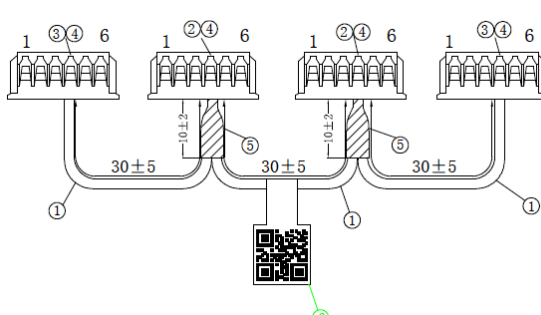
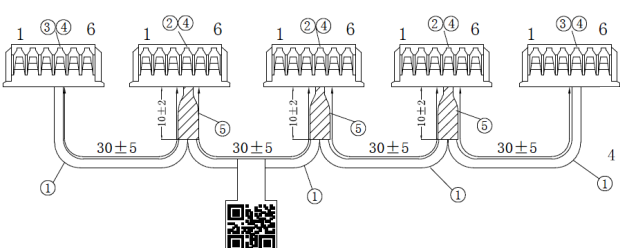
NEVO+600 Input Cable Set (CAB-N6)	
CAB-N6 Contents	
1 x Input Power Connector (J1) Housing	
3 x Input Power Connector (J1) Crimp Terminals	
1 x Global Signal (J2) Cable (220mm)	

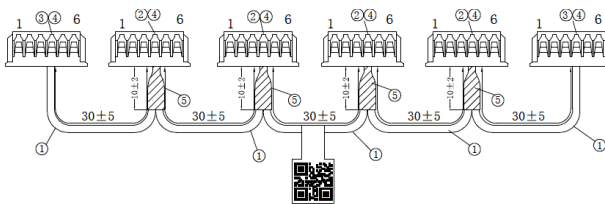
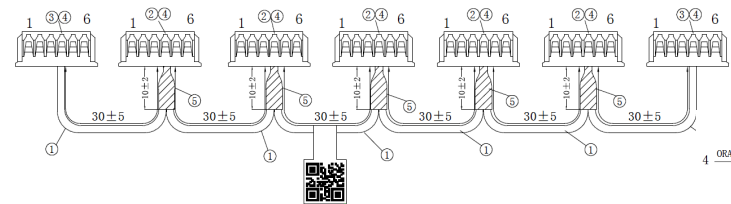
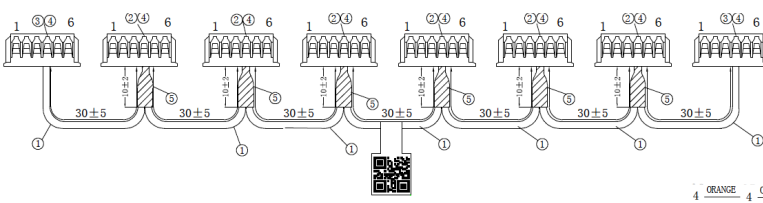


Single Output Cable Set (CAB-SOP)	
CAB-SOP Contents	
1 x Single Output Module (J5) Cable (150mm)	
2 x 6.3mm x 0.8mm Faston Crimp Connector	
	

Dual Output Cable Set (CAB-DOP)	
<p>Contents</p> <p>1 x Dual Output Module (J1) Cable (150mm)</p> <p>1 x Dual Output Module (J5) Cable (220mm)</p>	



Current Sharing Links	
CAB-CS2 Contents	Share2Way (CAB-CS2)
1 x Share2Way	 <p style="text-align: right;"><u>WIRE TABLE</u> 4 ORANGE 4</p>
CAB-CS3 Contents	Share3Way (CAB-CS3)
1 x Share3Way	 <p>Heat-shrinkable tube</p> <p style="text-align: right;"><u>WIRE TABLE</u> 4 ORANGE 4 ORANGE 4</p>
CAB-CS4 Contents	Share4Way (CAB-CS4)
1 x Share4Way	 <p style="text-align: right;"><u>WIRE TABLE</u> 4 ORANGE 4 ORANGE 4 ORANGE 4</p>
CAB-CS5 Contents	Share5Way (CAB-CS5)
1 x Share5Way	 <p style="text-align: right;"><u>WIRE TABLE</u> 4 ORANGE 4 ORANGE 4 ORANGE 4</p>

<p>CAB-CS6 Contents</p> <p>1 x Share6Way</p>	<p style="text-align: center;">Share6Way (CAB-CS6)</p>  <p style="text-align: right;">WIRE TABLE</p> <p style="text-align: right;">4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4</p>
<p>CAB-CS7 Contents</p> <p>1 x Share7Way</p>	<p style="text-align: center;">Share7Way (CAB-CS7)</p>  <p style="text-align: right;">WIRE TABLE</p> <p style="text-align: right;">4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4</p>
<p>CAB-CS8 Contents</p> <p>1 x Share8Way</p>	<p style="text-align: center;">Share8Way (CAB-CS8)</p>  <p style="text-align: right;">WIRE TABLE</p> <p style="text-align: right;">4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4 ORANGE 4</p>

All specifications are believed to be correct at time of publishing. Vox Power Ltd reserves the right to make changes to any of its products and to change or improve any part of the specification, electrical or mechanical design or manufacturing process without notice. Vox Power Ltd does not assume any liability arising out of the use or application of any of its products and of any information to the maximum extent permitted by law. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document or by any products of Vox Power Ltd. VOX POWER LTD DISCLAIMS ALL WARRANTIES AND REPRESENTATIONS OF ANY KIND WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF SUITABILITY, FITNESS FOR PURPOSE, MERCHANTABILITY AND NON-INFRINGEMENT.

Please consult your local distributor or Vox Power directly to ensure that you have the latest revision before using the product and refer to the latest relevant user manual for further information relating to the use of the product. Vox Power Ltd products are not intended for use in connection with life support systems, human implantations, nuclear facilities or systems, aircraft, spacecraft, military or naval missile, ground support or control equipment used for the purpose of guidance navigation or direction of any aircraft, spacecraft or military or naval missile or any other application where product failure could lead to loss of life or catastrophic property damage. The user will hold Vox Power Ltd harmless from any loss, cost or damage resulting from its breach of these provisions.