


Silicone O-Ring (Red-Orange)
ROHS Compliant
Helps seal Panel Hole to meet IP67 Rating.

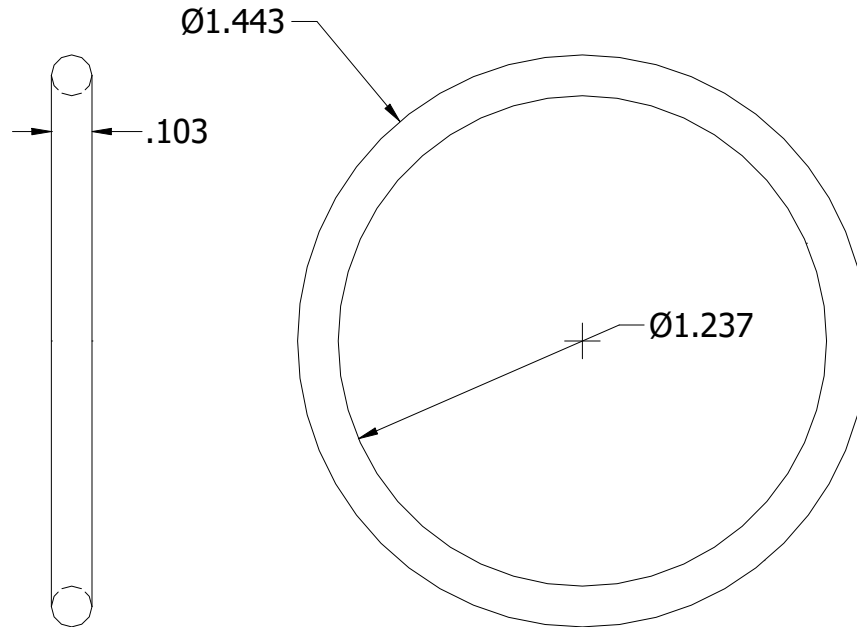

Assembly Procedure

Remove knurled nut and assemble ACC09 O-ring onto threaded neck of classic Sonalert®. Place threaded neck through panel hole and secure with mounting nut. Hand tighten only.