

Capacitance Decade Box


Model 380405

Introduction

Congratulations on your purchase of the Extech 380405 Capacitance Decade Box. This device offers 5 decades of capacitance ranges from 100pF to 11.111uF (in 100pF steps). Slide switches allow easy addition and subtraction of capacitance values. Binding posts (3) offer simple and secure connections. Careful use of this decade box will provide years of reliable service.

Specifications

| | |
|------------------------|---|
| Capacitance ranges | 100pF to 11.111uF in 100pF steps |
| Internal Residual Cap: | 50pF maximum |
| Voltage limit | 50VDC (non-polarized capacitors) |
| Connection | Three (3) binding posts |
| Accuracy | 5% (<=1uF: 1kHz test frequency; > 1uF: 100Hz test frequency) |
| Operating conditions | Temperature: 32 to 122°F (0 to 50°C) / Humidity: < 80%RH |
| Dimensions/Weight | 5.79 x 4.61 x 1.3" (14.7 x 11.7 x 3.3cm) / Approx. 0.69 lbs. (312g) |

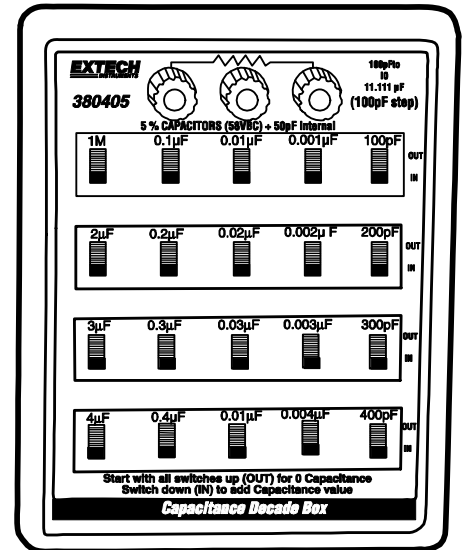

Operation

Binding Post Connections

The binding posts can be used for connections in several ways:

1. A banana plug can be inserted directly into the posts.
2. Bare wire can be threaded through the post after it has been unscrewed. Once the bare wire is threaded, tighten the posts as necessary.
3. Alligator clips can be used but use caution not to strip the post threads or plastic post housing.

The Capacitance output is available on the RED and the BLACK binding posts. The WHITE post is case ground and is typically not used. Connect the positive lead of the device under test to the RED post. Connect the negative lead to the BLACK post. Use the WHITE grounding post only if the device under test will be grounded to the 380405 case.

Range Selection

The 20 front panel switches are used to select the capacitance that will be output on the RED and BLACK terminals. When a switch is set to the IN position, the value printed above the switch is added to the total capacitance available at the posts. When the switch is set to OUT it is excluded from the total capacitance. If all of the switches are set to OUT, the total output capacitance will be zero (+ 50pF residual capacitance – approx).

For example, if the desired output value is 10.5uF, set the following switches to the IN position: 4uF, 3uF, 2uF, 1uF, 0.4uF, and 0.1uF.

Testing

This device can be used to verify the calibration integrity of multimeters, LCR meters, calibrators, etc. Connect as described in the Binding Post Connections section above, and then set the capacitance switches to output the desired capacitance. Ensure that the voltage supplied by the device under test is not greater than 50VDC. The device under test should read the value of capacitance selected on the tester. If it does not, the device under test may need calibration, adjustment, or repair.

Calibration and Repair Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Copyright © 2013 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form
ISO-9001 Certified
www.extech.com